

MAXHUB



Meeting Video Soundbar User Manual

Note: All pictures in this manual are for reference only, please refer to the actual product.

● Safety Warning and Precautions

Before using and operating this device, please read thoroughly and comply with the following precautions.

1) Operating Environment

- The device is NOT water-proof and dust-proof. Do NOT place the product in dusty and humid environments in case of internal short circuit.
- DO NOT expose the device to any heat source (such as electrical heater).
- Operating temperature is 0–40°C, operating humidity is 10%–90%RH. Please use the product accordingly.

2) Children Safety

The product and accessories may contain some small parts. Please keep them from children to avoid accidental swallowing or danger.

3) Power supply

Please use the standard power adapter.

4) Maintenance

 
- Please contact technical support for maintenance services.
- Do NOT insert any sharp or pointed object into the device.
- Please keep the device safe and avoid falling down.

● Statement

- 1) Intellectual property right statement: The patents cover the hardware design and software of this product. Anyone reproduces the product or the contents of this instruction without prior written permission from the Company shall be liable to legal prosecutions.
- 2) The description, illustrations, etc. in this document may subject to change per the latest product specification and performance.
- 3) The product images are for illustrative purposes only and may slightly differ in appearance, colour, size, etc. from the actual product.
- 4) The company reserves the rights to improve and change the appearance and design of the product without notice.

1. Product Function

Please familiarize yourself with the interface and buttons of the device before using this device.

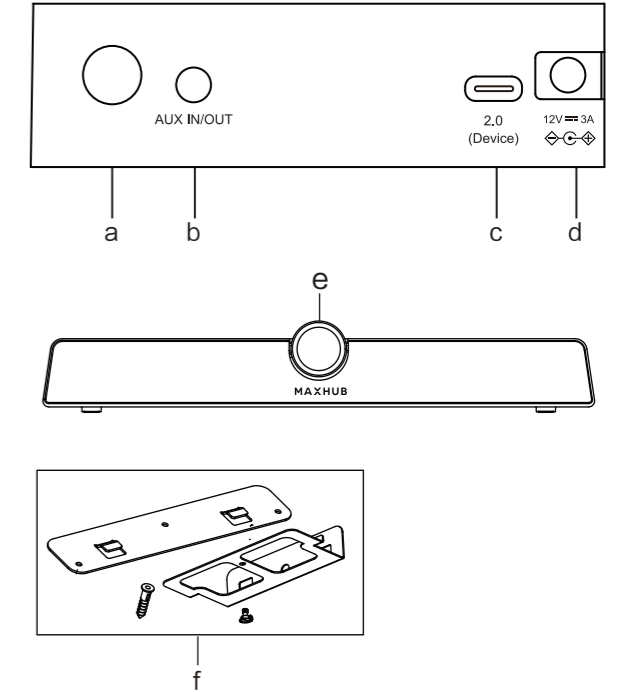


- a. ○ : Multi-function button.
- ① Press to turn on or off the microphone.
 - ② Press and hold to turn on/disconnect/turn off the bluetooth.
- b. AUX IN/OUT: Used for external audio equipment.

- c. 2.0 : To connect device with computer through a USB Type-A to Type-C data cable, and provide the computer with camera, microphone and speaker.
- d. DC in : Used for 12V power input power supply.
- e. Camera: High-performance camera.
- f. Wall-mounted components.

2. Mounting

 - 1) Place on the desktop.
- 2) Wall-mounted: Fix the bracket onto the Wall with screws, then place the Meeting Video Soundbar onto the bracket.

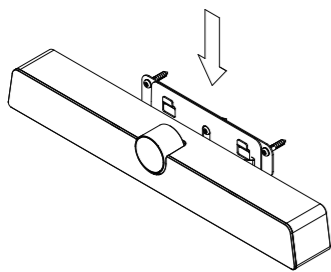


Note: The connection of different samples may slightly differ. Please refer to the actual product.

● Accessories Introduction

Please check the following items in the product box.

User manual x1	Wall-mounted components x1
Peeping cover x1	Power adapter x1
USB cable x1	Remote control x1

 ● Remote Control

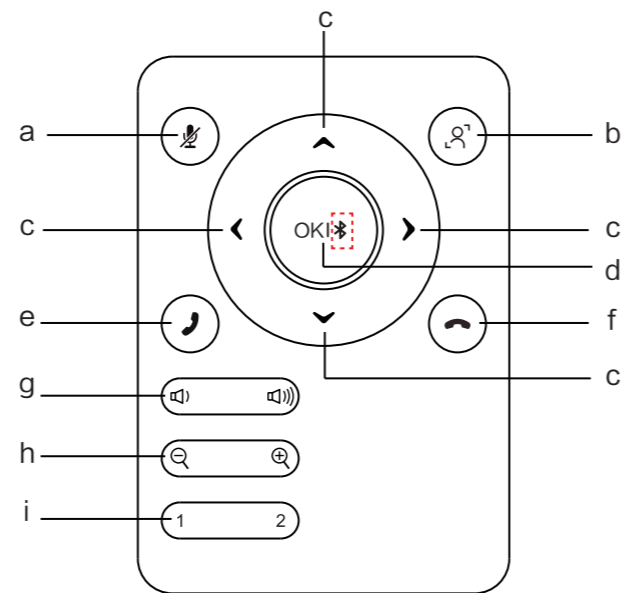

Note: ✪ (Bluetooth) is optional.

- a. : Mute Button, press to turn on or off the microphone.
- b. : Press to enable/disable the auto framing function.

(After pressing the button, the screen will display the status, " " means open, " " means off.)

- c. : Direction Button. After zoom+/-, press the direction buttons to move the camera.

- d. OKI ✪: Confirm & Bluetooth Button.

① Camera image initialization function: Press to restore the camera image to its original state.

② Bluetooth Settings:

I. Turn on Bluetooth: Press and hold until the Bluetooth indicator light is on.

II. Disconnect the Bluetooth connection: When the Bluetooth is connected (the Bluetooth indicator light is on), press and hold to disconnect the Bluetooth until the indicator light is flashing.

III. Turn off Bluetooth: When the Bluetooth is disconnected (the Bluetooth indicator light is flashing), press and hold until the Bluetooth indicator light is off to turn off Bluetooth.

- e. : Answer the calls.

- f. : Hang up the calls.

- g. : Volume Button, press to adjust the system volume.

- h. : Digital Zooming, press to digitally zoom the camera. (Available only when auto framing is disabled). After zooming in, the direction button can move the picture.

- i. Presets:

① When the camera is turned on, can set and switch the presets in settings. (Available only when auto framing is disabled).

② Press and hold the number button "1/2" for 2 seconds to save the current view as a preset.

③ Each preset contains zooming level, viewing angle information. Up to two presets are supported.

④ Press 1/2 to switch amongst the presets.