

## WARRANTY INFORMATION

**Ultimate Support Systems** offers a Limited Lifetime Warranty on TS-80 SERIES. For Full Details, Exclusions and Limitations as well as information on Obtaining Warranty Service, please see full warranty details available online at [www.ultimatesupport.com](http://www.ultimatesupport.com).

To purchase the Ultimate Protection Plus Premium Service and Support Plan, please visit [www.ultimatesupport.com](http://www.ultimatesupport.com) or call customer support at **800-525-5628** for more information.

## WARRANTY REGISTRATION

**Visit [www.ultimatesupport.com](http://www.ultimatesupport.com)** for a quick and convenient process for registering your new Ultimate Support product. Warranty Registration and Proof of Purchase are required for warranty fulfillment. Full Limited Lifetime Warranty and Ultimate Protection Plus Premium Service and Support Plan details are available online.

# ULTIMATE SUPPORT™

THE STRENGTH OF INNOVATION

Product Manual  
for Ultimate Support

---

**TS-80 SERIES  
THE ORIGINAL**

---

**STANDARD BLACK  
SPEAKER STAND**

TS-80B ITEM #13904

**STANDARD SILVER  
SPEAKER STAND**


TS-80S ITEM #13903

**TALL BLACK  
SPEAKER STAND**


TS-88B ITEM #13906




# SET-UP

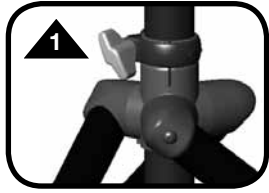


**STEP 1**  
Loosen leg fitting hand knob.

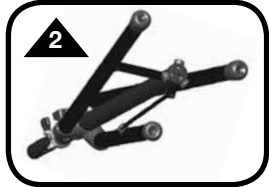


**STEP 2**  
Turn stand upside down and pivot legs so Ultimate Support label faces you.

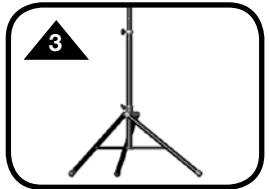

**STEP 3**  
Turn stand upright and slide leg fitting to adjust diameter of leg spread. Leg braces should be parallel to floor for maximum stability. Tighten hand knob.

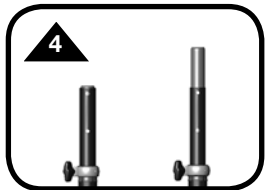

**STEP 4**  
The built-in adapter fits both 1-1/2" or 1-3/8" internal diameter speaker sockets. Use the lower position for 1-1/2". For 1-3/8" sockets, depress push buttons and raise adapter until it locks in raised position.

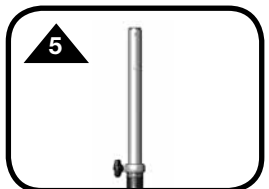

**STEP 5**  
Loosen hand knob on the telescoping collar and raise center tube 6-10". Retighten hand knob.



**STEP 6**  
Put speaker cabinet on top, slowly loosen hand knob and raise cabinet to desired height. Tighten hand knob.

NOTE: Stand load capacity is 150 lbs. (68.2 lbs.)

*To lower speaker, slowly loosen hand knob. Use caution.*

## SPECIAL INSTRUCTIONS

1. Occasionally clean the stand with a damp cloth or non-abrasive cleaner. Do not lubricate or use silicone spray on the center tube.
2. When loading the tripod, ONLY add the speaker when the tripod is in a fully upright position (all legs on the floor).
3. Do not drag the Tripod Speaker Stand while it is loaded; this could cause breakage of the fittings and result in damage to the stand.
4. When supporting equipment, check that the telescoping collar is securely tightened and the safety pin is inserted into slot on upper telescoping tube.
5. Always release the collar with caution and stand clear of load.

## ACCESSORIES

### Speaker Stand Mounting Bracket

**BMB-200K (#10766)**

External bracket securely mounts any speaker cabinet with a flat bottom on an Ultimate Support speaker stand.



### Speaker Stand Socket Mounting Bracket

**TSM-150MK (#13421)**

**TSM-138MK (#13425)**

Internal metal bracket securely mounts any speaker cabinet with a flat bottom on an Ultimate Support speaker stand.



### Zippered Tote Bags

Heavy-duty, padded, zippered Tote Bags

**BAG-90 (#15691)**

Holds one TS-80B/TS-80S Speaker Stand.

10.5" x 49.5" (267 mm x 1257 mm)

**BAG-90D (#15693)**

Holds two TS-80B/TS-80S Speaker Stands.

14.5" x 49.5" (368 mm x 1257 mm)

**BAG-99 (#15692)**

Holds one TS-88B Speaker Stand.

10.5" x 60.5" (267 mm x 1537 mm)

**BAG-99D (#15694)**

Holds two TS-88B Speaker Stands.

14.5" x 60.5" (368 mm x 1537 mm)



## LIGHTING TREE

Turn a Tall TS-88B Speaker Stand into a Lighting Tree.

### For a Single-Tier Lighting Tree add:

LTB-48B (#14107)

48" Lighting Crossbar

### For a Two-Tier Lighting Tree add:

LTV-24B (#14108) 24" Vertical Extension

LTB-48B (#14107) 48" Lighting Crossbar

LTB-24B (#14106) 24" Lighting Crossbar Pair