

ZyPer Rack Assembly

QUICK-START GUIDE

The ZyPer Rack Assembly is a 19" x 5U or 6U space that is designed to hold eight or ten ZyPer encoders or decoders using the included carrier units. (ZyPer4K = 8 units and ZyPerUHD = 10 units) The Rack Assembly is flexible and allows devices to be mounted facing forward or backward depending upon your connection requirements. Each carrier unit features an L-bracket and any needed screws for a reliable and secure installation.

Operating Notes

- In closed or multi-unit rack assemblies, the operating temperature of the rack environment may be greater than the ambient room temperature. Ensure that the device(s) being installed do not exceed the maximum operating temperature.
- Always mount devices within the Rack Assembly so that sufficient air flow is not compromised.
- Orientation of the encoders and decoders, within the Rack Assembly, should be taken into consideration based on your current setup. For example, it may be desirable to install some encoders and decoders with the HDMI and Ethernet connectors facing the back of the Rack Assembly, instead of the front.

Features

- Holds up to eight ZyPer4K encoders or decoders within a 5U or 6U rack space.
 - Standard ZyPer4K units require 5U rack space.
- Extended ZyPer4K encoders and ZyPer4K-XS units require 6U rack space
- Holds up to ten ZyPerUHD encoders in 6U rack space.
- Fits standard 19" rack assemblies
- Allows units to be mounted forward or backward
- L-bracket on each carrier unit provides secure mounting
- RoHS-compliant; built using environmentally-safe materials and construction

In the Box


- 1 x ZyPer Rack Assembly
- 8x or 10x carrier units
- 24 x 4-40 countersink screws (ZyPer4K)
- 2 Filler plates (ZyPerUHD) Used to cover unused slots in ZyPerUHD Rack Mount Kit

Rack Assembly Part Numbers

- | | |
|---------------------------------|---|
| • ZyPer4K Standard Size Box | = Z4KRACKC1 |
| • Standard Size Filler Plate | = Z4KBCFP (Used to cover unused slots in Standard Rack Mount Kit) |
| • ZyPer4K Extended Size Box | = Z4KRACKC2 |
| • Extended Size Filler Plate | = Z4KCEXTFP (Used to cover unused slots in Extended Rack Mount Kit) |
| • Z4K Center Carrier Bracket | = Z4KCCBRK (Used to mount standard size Z4K box in Extended Mount Kit) |
| • ZyPer4K-XS | = Z4KRACKXS |
| • ZyPer4K-XS Blank Filler Plate | = Z4KXSBP (Used to cover unused slots in ZyPer4K-XS Rack Mount Kit) |
| • ZyPerUHD | = ZUHDRACK (Note: Does not currently support ZyPerUHD-EA units) |
| • ZyPerUHD Blank Filler Plate | = ZUHDBP (Used to cover unused slots in ZyPerUHD Rack Mount Kit) |

Installation


1. Mount the Rack Assembly in the rack using four screws, as shown:

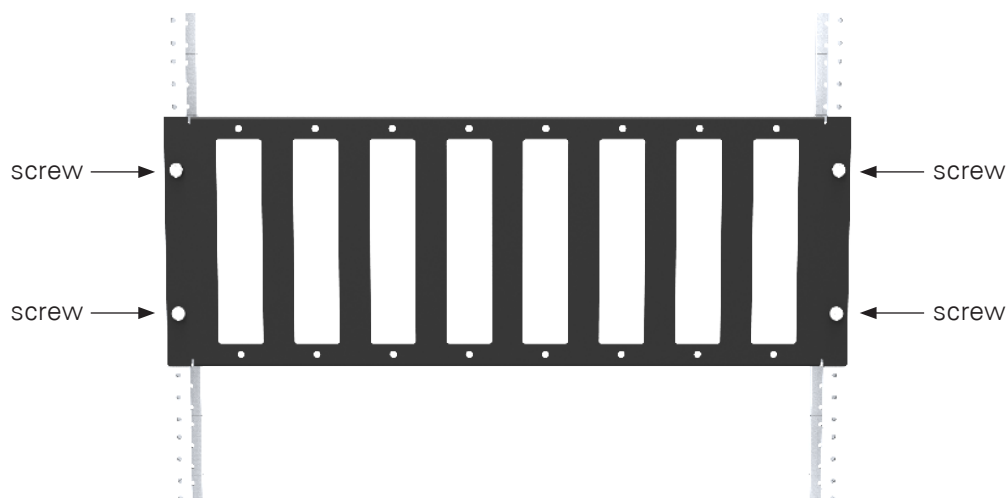

2. Install the ZyPer4K encoders/decoder in the carrier unit using the included 4-40 countersink screws. ZyPerUHD should use the screws already included with the ZyPerUHD units. Make sure that three screws are used to secure each device. Note that the ZyPer encoders/decoders can be positioned forward or backward within each carrier unit, depending upon your requirements.


Orient the carrier so that the longer extrusion is at the bottom. Use two screws for this bottom portion of the carrier unit and a single screw on the top portion as shown. Three total screws.

For best results, the orientation of each encoder and decoder should be taken into consideration. For example, you may want to install some encoders or decoders so that the HDMI and Ethernet connectors are facing toward the rear of the Rack Assembly.

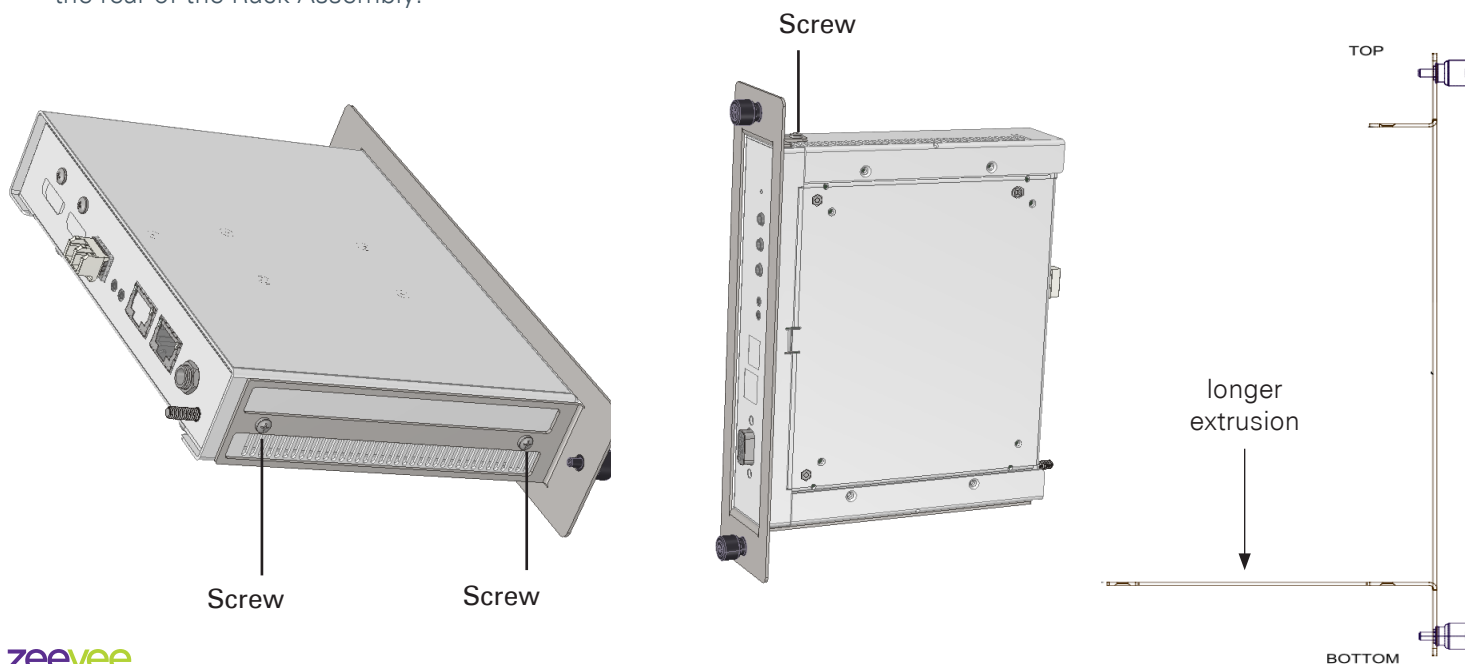

3. Install each carrier unit into an available slot on the Rack Assembly. Tighten the each thumbscrew until each carrier unit is secured. Do not overtighten or apply high-torque devices to the thumbscrews.

Each encoder and decoder can be installed in any of four positions, as shown below:

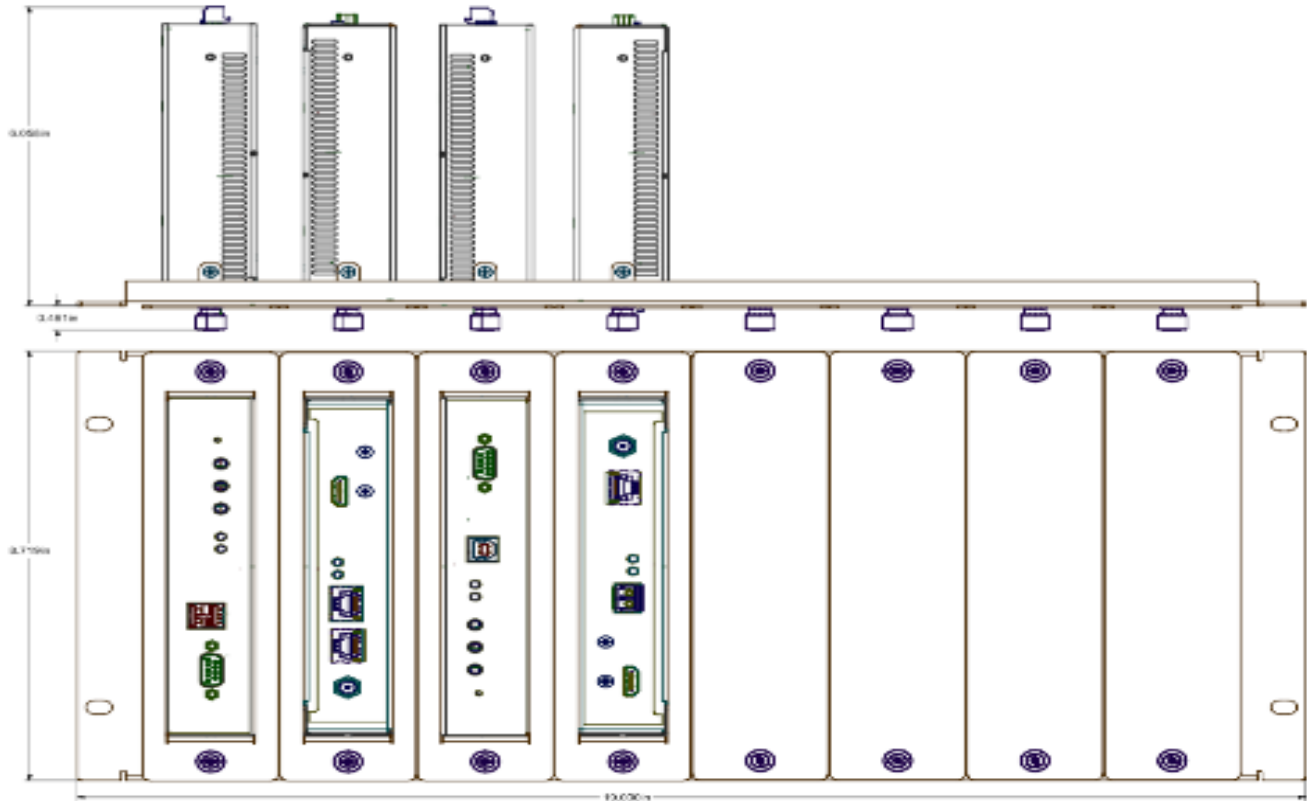

Specifications


Dimensions ZyPer4K Standard Box
(including carrier units)

Dimensions ZyPer4K Extended Box ZyPer4K-
XS and ZyPerUHD (including carrier units)

- 19.0" x 8.72" x 5.49" (483 mm x 221 mm x 139 mm)
- 19.0" x 10.46" x 5.51" (483 mm x 266 mm x 140 mm)

ZyPer4K-XS

ZyPer4K-XS units do not require screws to attach to the carrier unit. They slide in and are held in place by the bracket itself.

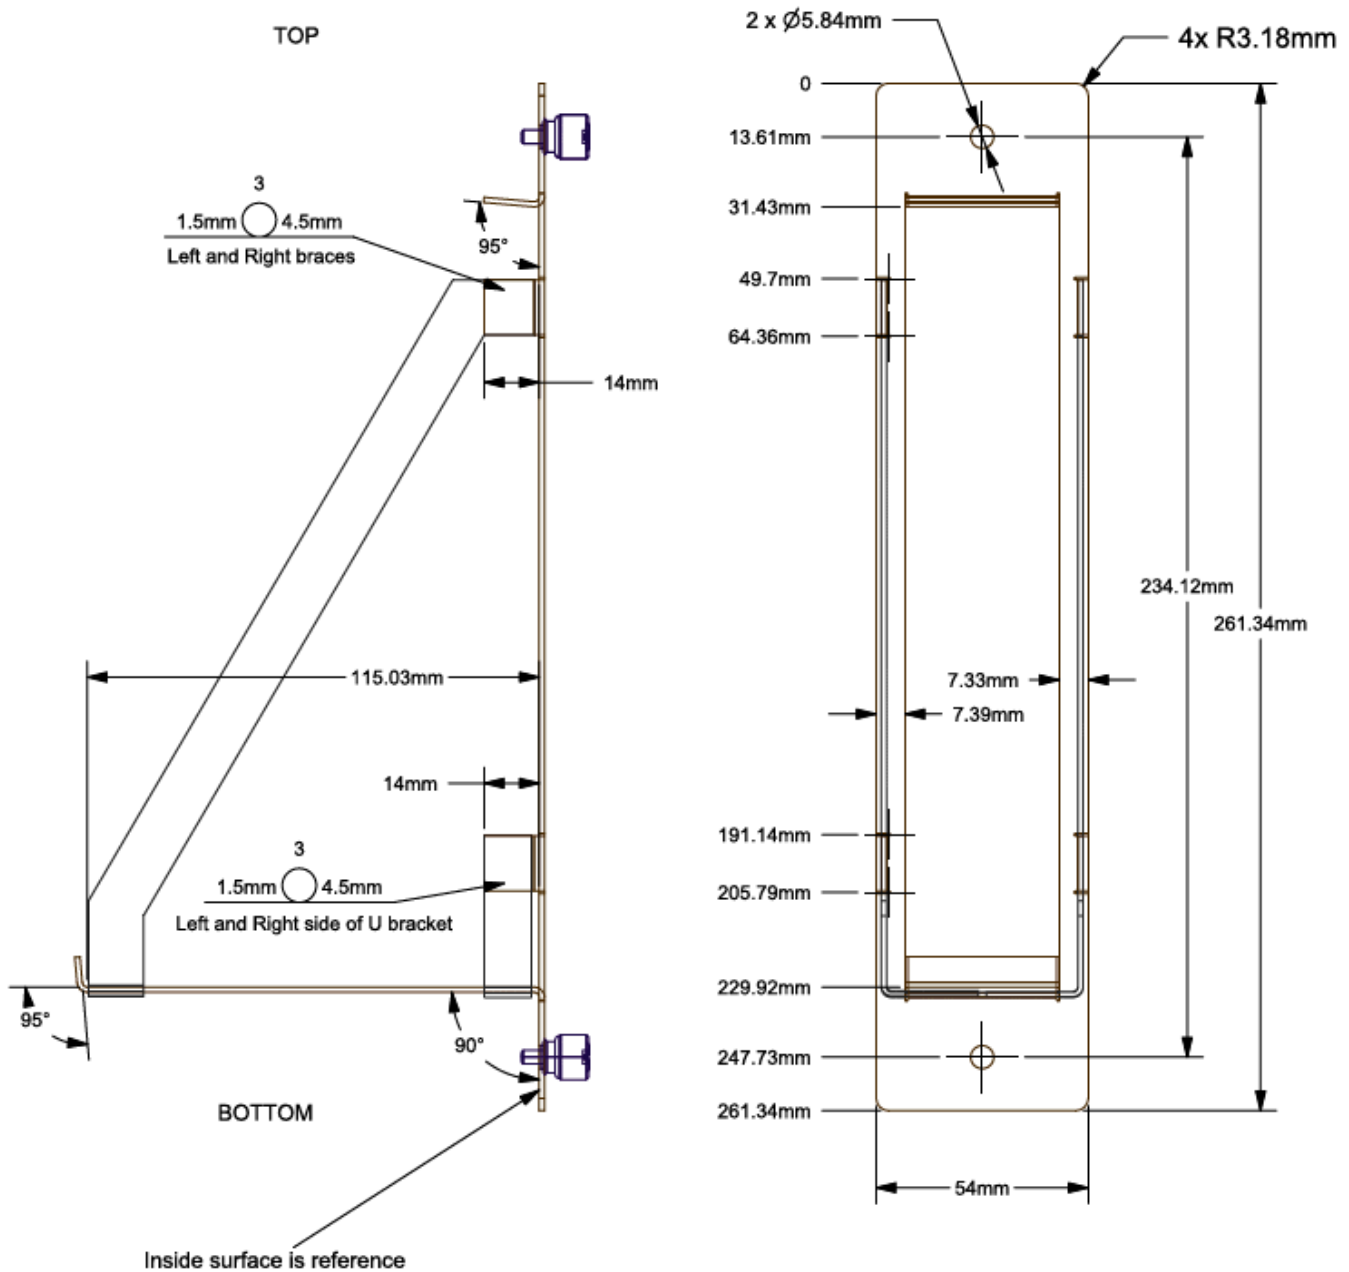

ZyPer4K-XS

ZyPer4K-XS units do not require screws to attach to the carrier unit. They slide in and are held in place by the bracket itself. Note the proper way to install the ZyPer4K-XS unit into the carrier module is as follows.

1. Insert ZyPer4K-XS into the bottom (wide) portion of the carrier module first.
2. Tilt the ZyPer4K-XS unit into the top portion of the carrier module while gently flexing the top portion of the carrier module outward so that the ZyPer4K-XS can slide under the small tab.
3. Gently flex the carrier module back if needed. Install the carrier module into the main base plate securely with both screws.

